


ZOLKOWPREAMPS 2.2.3 V2

3 SÁVOS BASSZUSGITÁR ELEKTRONIKA AKTÍV BLENDEL

2016-06-05

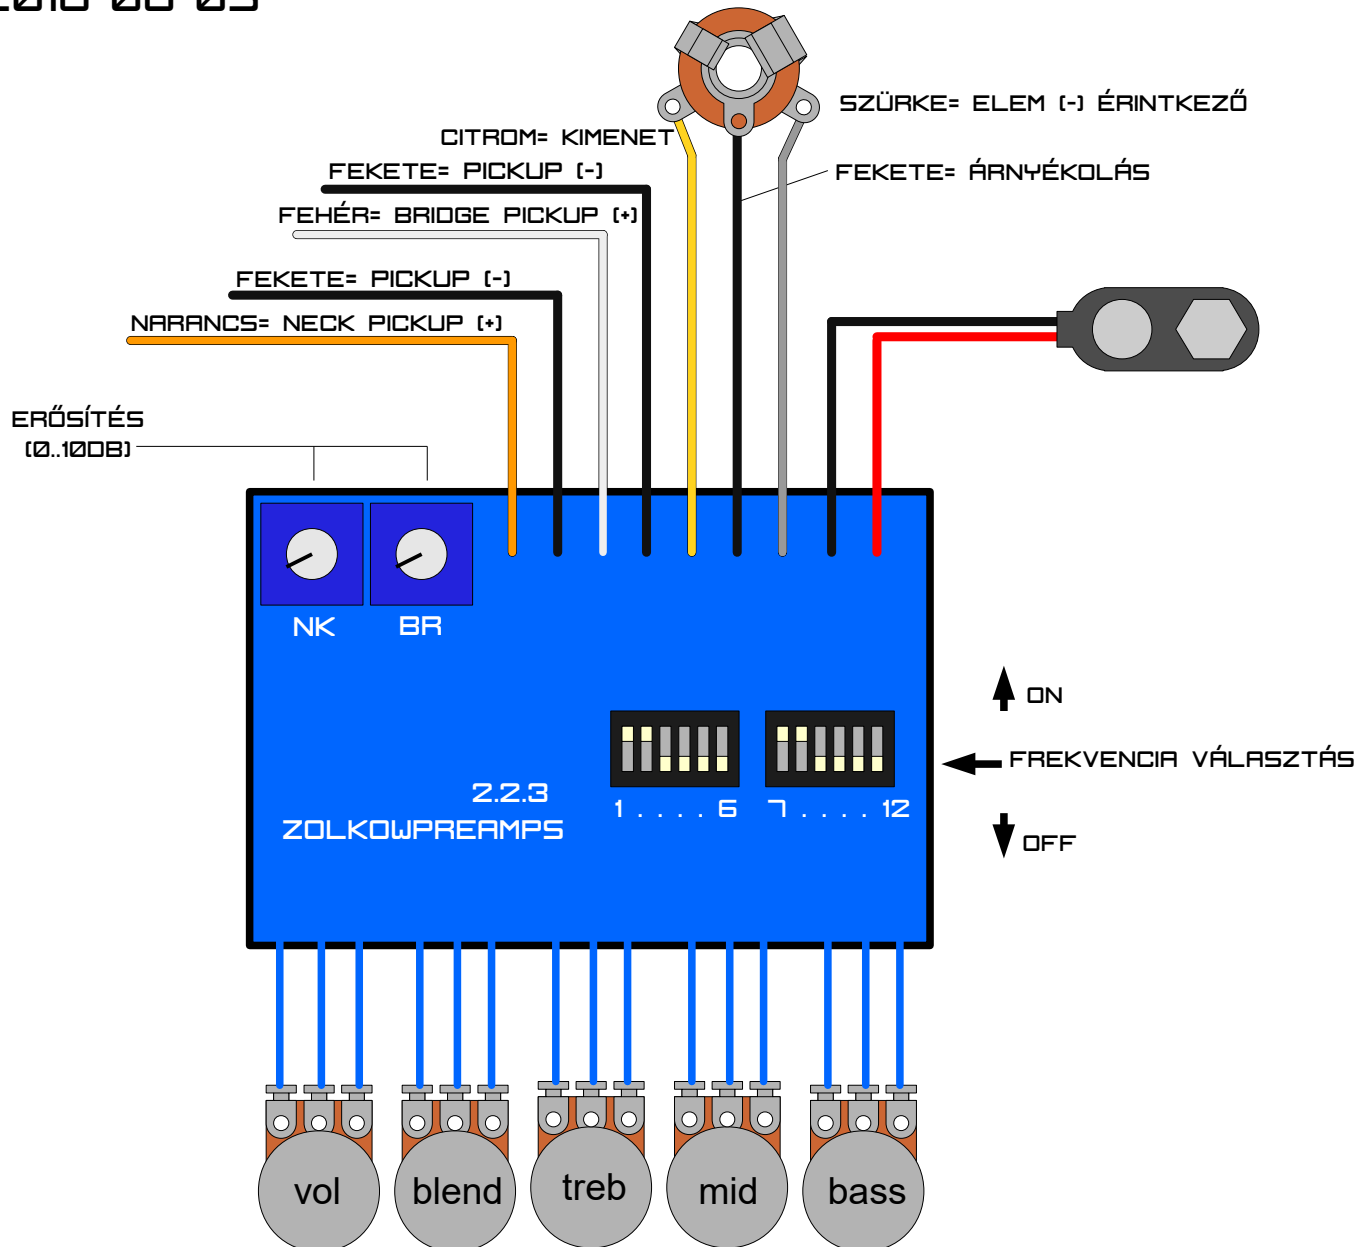

FREKVENCIÁK:

mély = 20 Hz: [11, 12 = on]
mély = 40 Hz: [11, 12 = off]

közép = 220 Hz: [5, 6, 7, 8, 9, 10 = ON]
közép = 400 Hz: [5, 6, 7, 8 = OFF] [9, 10 = ON]
közép = 600 Hz: [5, 6 = OFF] [7, 8 = ON] [9, 10 = OFF]
közép = 900 Hz: [5, 6 = ON] [7, 8, 9, 10 = OFF]
közép = 1800 Hz: [5, 6, 7, 8, 9, 10 = OFF]

magas = 20 KHz high shelf : [1, 2, 3, 4 = OFF]
magas = 10 KHz high shelf : [1 = ON] [2, 3, 4 = OFF]
magas = 10 KHz bandpass : [1, 2 = ON] [3, 4 = OFF]
magas = 5 KHz high shelf : [3 = ON] [1, 2, 4 = OFF]
magas = 5 KHz bandpass : [1, 2 = OFF] [3, 4 = ON]
magas = 4 KHz high shelf : [1, 3 = ON] [2, 4 = OFF]
magas = 4 KHz bandpass : [1, 2, 3, 4 = ON]